

Simple Memory Programming Steps for your Yaesu FT-60R HT

1. Turn radio ON by rotating the on/off/volume knob next to the antenna.
2. Press [V/M] key on the lower left of the keypad to go to VFO mode. If you press it once, and it briefly says MEMORY, press it once more for VFO.
3. Use the numeric keypad to enter desired frequency. 146.52 MHz should be entered as 1-4-6-5-2-0 (always 6 digits). There is no decimal point key.
4. Press [F/W] key on the lower right corner, then [SQUELCH TYPE]. This is the number "1" key on the keypad.
5. Rotate the tuning knob next to the volume control to select squelch type. When in doubt, select TONE for a repeater, and OFF for simplex.
6. Press [F/W] key again to **set squelch type**.
7. Press [F/W] key again, then the [CODE] key (this is the number 2 key).
8. Use tuning knob to select desired CTCSS (sub-audible) tone. 100 Hz is common.
9. Press [F/W] key to **set tone**.
10. Press [F/W] key for over one second - the next available memory location will start blinking in the display. The dashes (- - -) mean it's an empty memory spot.
11. Touch [F/W] key to write what you have programmed into this memory spot.
12. Don't forget to press the [V/M] key again to go into memory mode. Now you can go visit your newly-programmed frequency. Turn the selector knob by the volume control to visit the various memorized frequencies you have programmed.

Optional--Want to add an alphanumeric label to that memory entry?

- a. In Memory mode (not VFO mode--see step 2 above), select desired channel w/ channel knob.
- b. Press [F/W] key then [SET] (the zero key) to enter the Set Menu.
- c. Use the top tuning dial to go to Item 27 - NAME.
- d. Press [F/W] key and use the tuning dial to choose ALPHA.
- e. Press [F/W] key to set what you just chose.
- f. Press [FW] key then the [SET] (zero) key to enter the Set Menu again.
- g. Use the top tuning dial to go to Item 28 - NAME WRITE.
- h. Press [F/W] key once...then one more time to make the first digit blink.
- i. Use the tuning knob to select your desired alpha or numeric character.
- j. Press [F/W] key to set it - and move to next character.
- k. Repeat i-j above for up to six characters.
- l. When pressing [F/W] key after entering sixth character, a long beep is heard.
- m. Touch the PTT key on the side to exit Set Mode and go back to Memory Mode.

(Thanks to Clint, K6LCS, for the original programming sheet format, with mods by Dave, K7DAA, 5-4-10)