

Turning OFF the WIRES Tones on Yaesu VHF/UHF Radios (Compiled by K6VUG)

	VX-3R	VX-6R & VX-7R	VX-170 & VX-177	FT-60 & FT-60R	FT-2800	FT-8800 & FT-8900
1. Activate the SET menus	Press & hold the TXPO key for 1 second	Press the F/M key followed by the 0 key	Press the F/M key followed by the 0 key	Press the F/M key followed by the 0 key	Press & hold the MHz/Set key for 1 second	Press the (center) Set key momentarily
2. Select the WIRES submenu	Rotate the Dial knob to select 26 " DT A/M "	Rotate the Dial knob to select 31 " INT A/M "	Rotate the Dial knob to select 22 " INET "	Rotate the Dial knob to select 21 " INET "	Rotate the Dial knob to select 13 " INTNET "	Rotate the Main band Dial knob to select 17 " INET "
3. Change the WIRES setting	Press the TXPO key Rotate the Dial knob to select " MANUAL " Press the TXPO key	Press the 0 key Rotate the Dial knob to select " MANUAL " Press the 0 key	Press the F/M key Rotate the Dial knob to select " INT.MEM " Press the F/M key	Press the F/M key Rotate the Dial knob to select " INT.MEM " Press the F/M key	Press the MHz/Set key momentarily Rotate the Dial knob to select " LINK " Press the MHz/Set key momentarily	Press the Main band Dial knob Rotate the Main band Dial knob to select " INT.MEM " Press the Main band Dial knob
4. Select the Memory submenu	Rotate the Dial knob to select 28 " INT SEL "	Rotate the Dial knob to select 32 " INT SET "	Rotate the Dial knob to select 24 " INT MR "	Rotate the Dial knob to select 23 " INT MR "	Rotate the Dial knob to select 10 " DT MEM "	Rotate the Main band Dial knob to select 15 " DTMF W "
5. Select a blank memory	Press the TXPO key Rotate the Dial knob to select a memory that shows six dots (•••••) Press the TXPO key	Press the 0 key Rotate the Dial knob to select a memory that shows six dots (•••••) Press the 0 key	Press the F/M key Rotate the Dial knob to select a memory that shows six dots (•••••) Press the F/M key	Press the F/M key Rotate the Dial knob to select a memory that shows six dots (•••••) Press the F/M key	Press the MHz/Set key momentarily Rotate the Main band Dial knob to select a memory Press D/MR to make sure that it is blank Press the MHz/Set key momentarily	Press the Main band Dial knob momentarily Rotate the Main band Dial knob to select a memory that shows six dots (•••••) Press the Set key momentarily

How It Works

Simply said, the WIRES feature requires the radios to transmit a **preset** tone to another WIRES-Enabled radio or repeater to access the internet connection. Yaesu has also incorporated a feature to transmit **custom** DTMF tones from memory. **We simply switch the radio setup to use custom tones and leave the memory blank. No tones, end of story!**

For advanced users, the dialer can also be used with Echolink and IRLP enabled repeaters. I use it to send signal test codes to N6NFI repeater!

This document was compiled from personal notes and Yaesu Manuals.

73!

Umesh

K6VUG

k6vug@arrl.net